

INSTRUCTION MANUAL

MODEL:CTAG03

• **IMPORTANT NOTICE**


- a. Before the installation process begins, ensure that all components are in the box, and that the door is not damaged in any way.
- b. Be careful when moving the product, especially the glass, as it is tempered and is designed to shatter if cracked or chipped.
- c. Read these instructions carefully and install the enclosure as specified below. We recommend that you use one of our preferred installers to install this enclosure.

• **Tools used during installation.**

Spirit level

Spanner


Star screwdriver

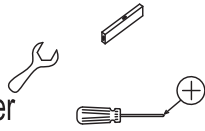

Electric Drill

Rubber hammer


Flat screwdriver

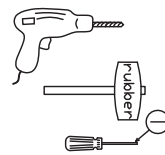

Measuring tape

Pencil

Silicone sealer

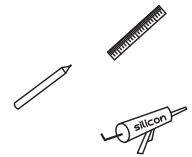

• **Accessories list**


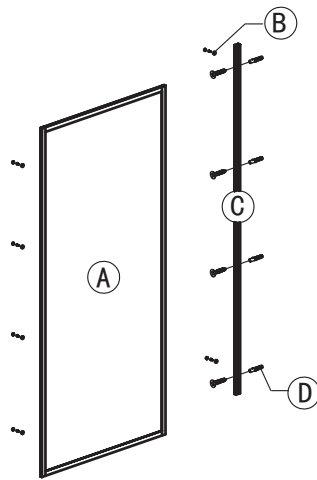



Fig.1

N.O.	PART NAME	QUAN.
A	SIDE PANEL	1
B	3.9*9.5 SCREW	6
C	WALL PROFILE	1
D	SCREW AND WALL PLUGS	4


Installing CTAG02 (885-915) between two walls.

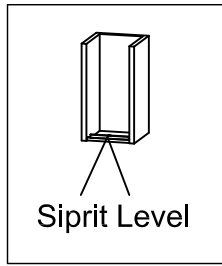


1. Ensure that the floortray is level before you begin with the installation.

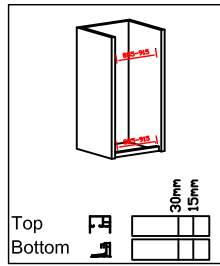


2. Measure the bottom distance and top distance between the two walls. Cut top rail and bottom rail to the required size.

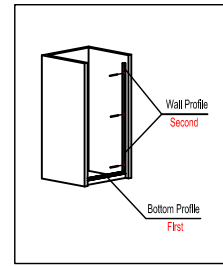


3. Before place bottom profile and then mount wall channel, please choose door opening direction as per fix instruction.

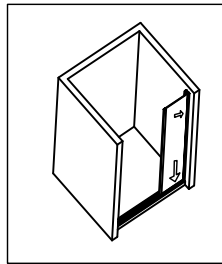


4. Install the fix panel.

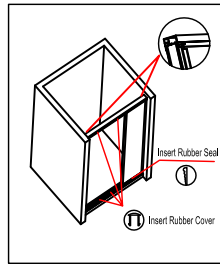


5. Fix top profile and insert rubber strip.

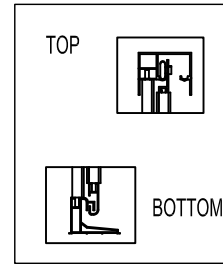


6. Hang centre sliding panel.

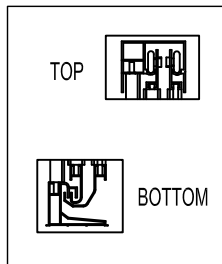

7. Hang the end sliding panel. Adjust the top wheels if necessary to align the panels and ensure the doors close's correctly

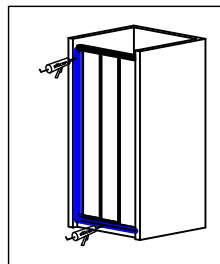


8. You now need to seal the enclosure with a good anti fungal silicone, only seal the out side of the enclosure. DO NOT SEAL THE ENCLOSURE ON BOTH SIDES!

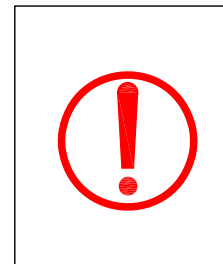


9. Allow the enclosure to dry for at least 24 hours before making use of it.


Installing return panel CTAG03(885).

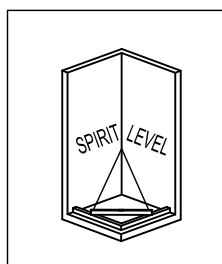


1. Ensure that the floortray is level before you begin with the installation.

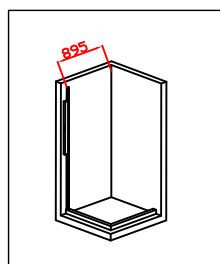


2. Measure 895mm from the 90 degree corner and mark on the outside of the aluminium wall channel.

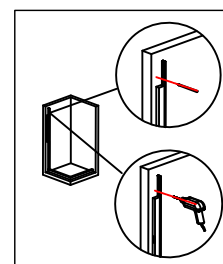


3. Ensure that you use a spirit level to make sure that the wall channel is completely plumb before you mark and drill the holes.

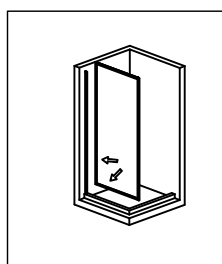

4. Insert return panel.

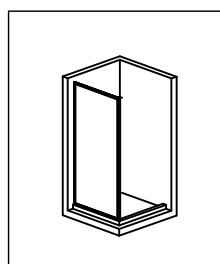

5. The follow is the same Instructions as Installing between two walls.

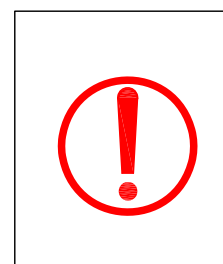

6. Allow the enclosure to dry for at least 24 hours before making use of it.