

INSTRUCTION MANUAL

MODEL: CTF7300 Shower Screen


• Important information

- A) This installation guide is designed for above mentioned shower enclosure.
- B) Upon purchasing your enclosure, please ensure that the packaging is not damaged and all seals in tact.
- C) When opening the packaging, please ensure that there are no damaged components and all parts are accounted for, No claims for missing parts or damages will be entertained once enclosure has been installed.
- D) Please handle the glass with care, it is tempered and will break if chipped or scratched in any way.

• Tools required:



• Accessories list

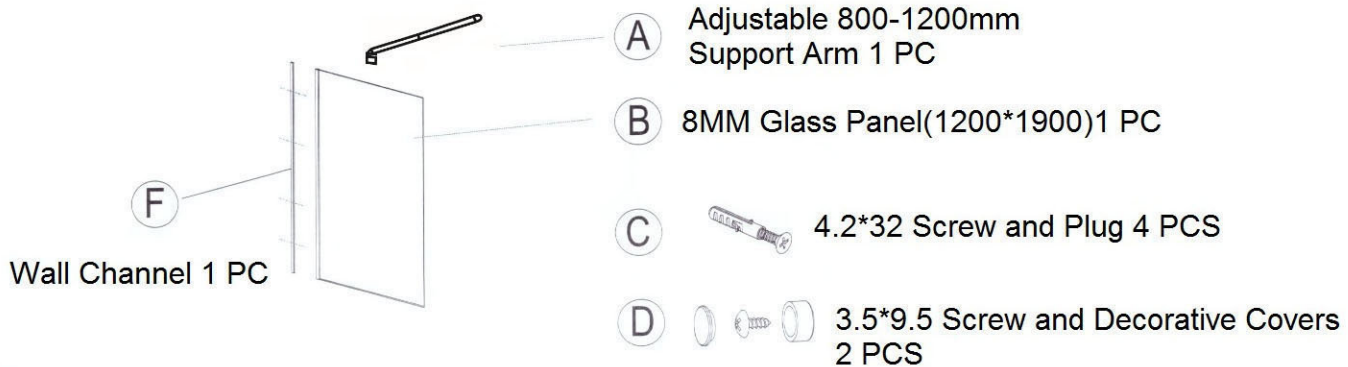

Installation Guide

1. Drill 6mm holes on the wall and fix wall channel through supplied screws(4.2*32) and plugs.
2. Insert glass panel into wall channel.
3. Install the support Arm(Please adjust the support arm to your desired length).
4. To secure door panel to wall channels use supplied drill bit and drill through the glass profiles into the wall channels.
Use provided screws(3.5*9.5)and chrome decorative covers.
5. Use a good quality anti-fungal clear silicone to seal between the panel bottom profile and floor(both sides).

DO NOT use shower screen 24 hours.